

E) Backrest Assembly



Assembly Instructions

Tools Needed: No tools are needed to assemble the Model 102-HD.

Please read all instructions before assembling


Step 1: Place (B) gas spring into (C) base and apply pressure downward. Note: (All sizes of gas springs use same assembly instructions).

Step 2: Attach (A) seat / toolbox assembly to (B) gas spring by placing and pressing into place. Note: (Toolbox is pre-assembled to seat).



Step 3: Attach (E) back rest assembly to (A) seat mechanism and tighten backrest adjustment knob.

Step 4: Apply weight by sitting on the seat (A) and then enjoy your new Eidos Ergonomics **Model 102HDT**.

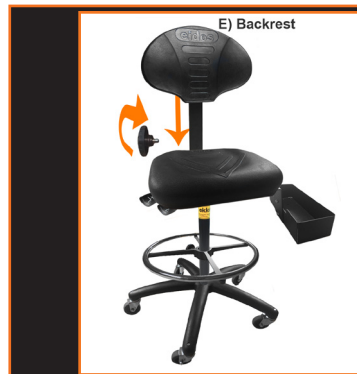

Warranty: Eidos products are covered by a limited warranty for a period of five years from date of purchase.

**Online Product Registration :*

<http://www.eidosergonomics.com/product-registration.html>

Model 102-HD Replacement Parts List

<p>A)-EIC-00062 MODEL 102 SEAT</p> 	<p>B)-EIC-06004-T 102 SEAT TILT RELEASE MECHANISM</p> 	<p>C)-EIC-10203 102 STANDPIPE/GAS SPRING</p> 	<p>D)-EIC-10202 102 5 POINT BASE</p> 	<p>E)-EIC-06005W 102 BACKREST (Foam Only)</p> 
<p>F)-EIC-10201 SEAT BACK UPRIGHT SUPPORT</p> 	<p>G)-EIC-06007B BACKREST BRACKET</p> 	<p>H)-EIC-10990 102-HDT TOOLBOX</p> 	<p>I)-EIC-006TB TOOLBOX SUPPORT</p> 	

For More Information:
<http://www.eidosergonomics.com/model102.html>



-EIS-10200
(Standard 3" Bell Glides)



-EIC-10205
(Optional 3" Caster)

Hardware

1/4" x .20 x 1/2" Hex Head Bolt
(Seat Attachment(4) and Backrest
Bracket (2), Toolbox (6)Qty of 12
Total Needed



1/4" .20 X 6" (Upright Support to
Backrest Bracket) Qty of 1(EA).



1/4" LockNut (Upright Support to
Backrest Bracket) Qty of 1(EA).



Warranty: Eidos products are covered by a limited warranty for a period of five years from date of purchase.

*Online Product Registration :
<http://www.eidosergonomics.com/product-registration.html>

