




### Assembly Instructions

Tools Needed: (2) 9/16" wrenches 3/4" socket, & pliers.  
Please read all instructions before assembling

**Step 1:** Attach the (C) Back Rest Assembly to the frame using the enclosed 1/2-13 x 1 1/4 hex head bolts. Tighten using a 3/4" wrench.

**Step 2:** From the back of (A) Base, slide Release Mechanism, handle first (left to right) through channel aligning center threads with center of channel.

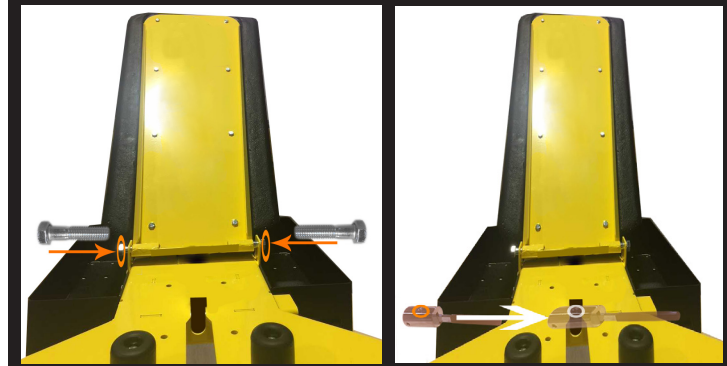

**Step 4:** Turning clockwise, screw gas spring into release mechanism turning 12 full rotations.

**Step 5:** Tighten aluminum spring spacer on strut of gas spring with pliers.

**Step 6:** Put top of gas spring eyelet into bracket at the top of the back, slide 3/8-16 x 1 1/4 bolt through the bracket, tighten with 3/8-16 reversible lock nut using two 9/16" wrenches.



**Warranty:** Eidos products are covered by a limited warranty for a period of five years from date of purchase.

**\*Online Product Registration :**

<http://www.eidosergonomics.com/product-registration.html>

